



HPA
SERIES

Safety, Operation, and Procedure Instructions for the HPA-High Power AC Hipot

Danger- Lethal Voltages:

Equipment to be used by trained personnel only

This Operator Manual contains instructions for the operation of a High Voltage power source. The operator of this equipment must use good judgement and follow all safety precautions noted in this guide to ensure the protection of himself and others in close proximity to the test area. **Failure to follow the instructions could result in injury or death. Proper grounding of the test set must be done prior to connecting this unit to a power source.**

Operator Manual



© HIGH VOLTAGE, INC.
31 County Route 7A
Copake, N.Y. 12516
Phone 518/329-3275 • Fax 518/329-3271
<http://www.hvinc.com>
E-mail: factory@hvinc.com

Table of Contents

About the Operator Manual	1
SECTION 1	
General Information	2
Features and Specifications	2,3
Controls and Indicators	4-5
SECTION 2	
Setting up the Equipment	6
Setting the Overload	7
Operating the Equipment	8,9
Blank Page for Notes	10
SECTION 3	
Performing Special Operations	11
Meter Re-calibration	11,12
Miscellaneous	12
Return Material	13
Warranty	14,15
ATTACHMENTS	3 PAGES, PARTS LIST 2 PAGES, SCHEMATICS

About the Operator Manual

Important

This Operator Manual describes the features and safe operation of a High Voltage Test Set. The instructions are intended to be clear and simple, but the operator must be trained and qualified according to established procedures for the use of this type of equipment.

This Operator Manual is organized to provide information on the **HPA Series AC Hipots** in steps that familiarize the new operator with the operation of this test set.

Section 1: Specifications and Controls.

Section 2: Setup and Operation.

Section 3: Performing Special Operations.

The Functions, Features, and Specifications of this HPA Series of AC Hipots are also discussed in the HPA Brochure available from High Voltage, Inc.

General Information

This section familiarizes the operator with the features and specifications of the **HPA Series of High Power AC Test Sets** manufactured by **HIGH VOLTAGE, INC.**

Features and Specifications

The HPA-10010FC2 AC high voltage test set provides continuously adjustable output voltage for the testing up to 100kV at 10kVA (100mA).

Features of this unit include:

- Manually adjustable output voltage control
- Adjustable secondary overload , 10-110% of rated current
- Fixed primary current overload, factory set to 120% of variable transformer rated primary current.
- "Zero Start" and External Interlock provision.
- Dual range secondary connected 3.5 inch analog output kilovolt meter.
- Triple range 3.5 inch analog output current meter.

HPA-10010FC2 MODEL SPECIFICATIONS

	HPA-10010FC2 Part No. PFT-1442S
Input	230V, 50/60 Hz, 50 amps, single phase
Output	0-100kVac, 10KVA resistive load(100mA)
Output Termination	2" x 5" TOROID on Feed-through Bushing
Duty	10kVA - 1 hour ON, 1 hour OFF (50% DUTY) 8kVA – Continuous Duty
Distortion	<5%
Meter Accuracy	2% of full scale
Kilovolt meter	3.5 inch analog display, Scaled 0-50/100kVac (RMS)
Current Meter	3.5 inch analog display, Scaled 0-25/50/100 mAac
Dimensions: Controls Tank	21"w x 25.5"d x 31"h (53cm w x 65cm d x 78cm h) 17.75"w x 17.75"d x 33.5"h (45cm w x 45cm d x 85cm h)
Weight Controls Tank	175 Lb (79kg) 325 Lb (148kg)

Table 1 *HPA-10010FC2 Specifications.*

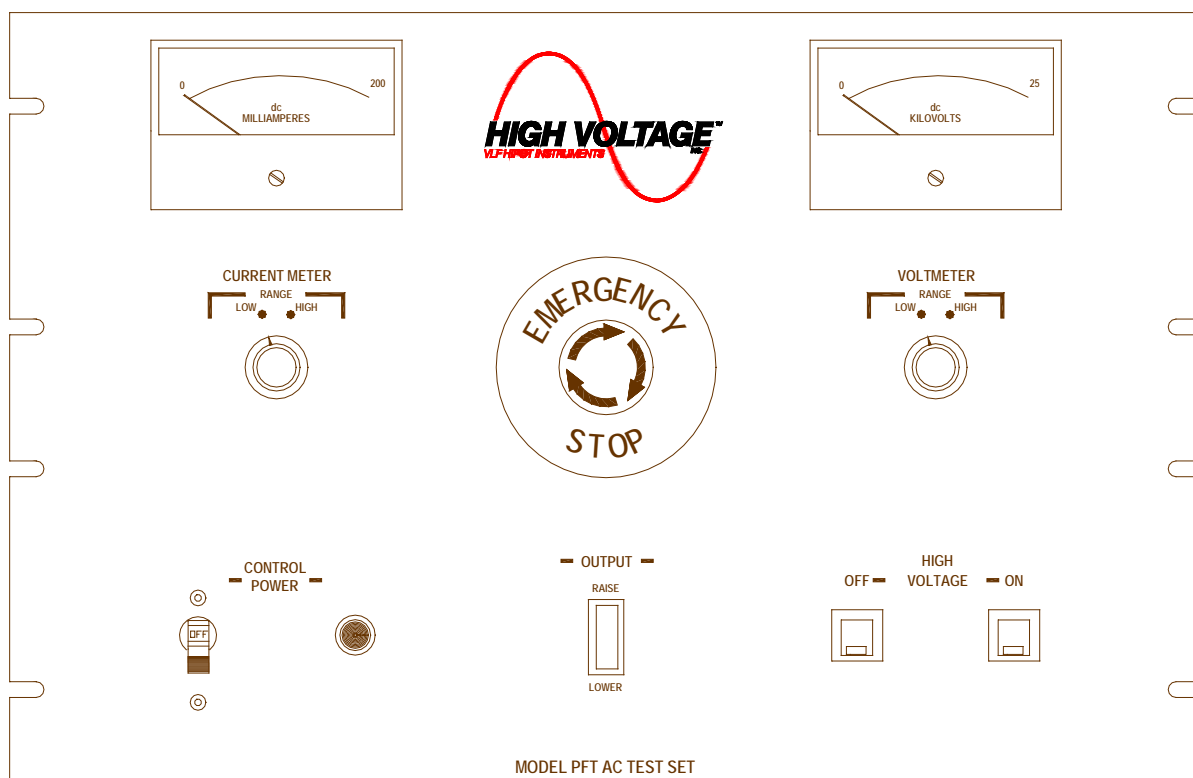


Figure 1 HPA-10010FC2 front panel controls.

MAIN POWER

The **MAIN POWER** circuit breaker provides protection for the control circuits. The neon lamp will light when the **MAIN POWER** and **CONTROL POWER** breakers are on and voltage is available through input line cord.

HIGH VOLTAGE ON/OFF

The **HIGH VOLTAGE ON (OFF)** pushbuttons activate (de-activate) the high voltage power circuits. The LED indicators provide long life positive indication of the circuit status. The **RED (ON)** LED lights when high voltage is energized, the **GREEN (OFF)** LED lights when the high voltage is de-energized.

OVERLOAD

The adjustable **OVERLOAD** setting allows the operator to set a maximum output current for pass/fail tests. The **RESET** pushbutton will illuminate when tripped and must be depressed to **RESET** and energize **HIGH VOLTAGE**.

OUTPUT RAISE/LOWER

The **OUTPUT RAISE/LOWER** spring-loaded rocker switch controls the motorized output control. This control will by default automatically start at ZERO (0) to energize the high voltage circuits. The output control automatically returns to zero at the completion of testing, after de-energizing the output.

EMERGENCY STOP

The **EMERGENCY STOP** switch, when depressed, shuts off the high voltage output. To release, rotate the cap clockwise.

CURRENT METER

The **ANALOG CURRENT METER** provides secondary current monitoring. The **HIGH/MED/LOW** range switch provides better resolution at lower load currents.

VOLTMETER

The **ANALOG KILOVOLT METER** provides accurate output voltage readings. 1-% precision resistors minimize the need for re-calibration due to aging shift. See **Voltmeter Re-calibration** in Section 3 for details on calibration. The **HIGH/LOW** range switch provides better resolution at lower voltages.

EXT INTLK (EXTERNAL INTERLOCK)

The **Ext Intlk** connector, located on the rear panel, is provided to allow for a normally open safety interlock switch to control the energizing of the high voltage output.

SETTING UP THE EQUIPMENT

The setup of this equipment must be in accord with local electrical codes and requirements. Careful consideration of the operator and any support personnel must be taken to minimize the possibility of electrical shock. These instructions provide an outline for the safe installation of this equipment. The need for a restricted access test area and the use of safety interlocks cannot be stressed enough. Always think safety above all else when installing any high voltage test equipment.

1. **Position the high voltage section in the testing area. Allow 24 inches (61CM) to grounded objects to avoid corona when operating.**
2. **Locate the Control cabinet close to the power source and within 20 feet (6.1M) of the HIGH VOLTAGE tank.**
3. **Select a location** for the control unit that will allow easy viewing of the meters at a safe distance from the test object and high voltage section.
4. **Connect input power to the input terminal block using customer supplied power leads.** Install the input power in accord with local electrical codes to ensure safe operation. See the Model Specification Table on Page 3 for the input power requirements.
5. **Be sure that all the controls are off**, in their de-energized or fully counterclockwise position.
6. **Secure CUSTOMER SUPPLIED ground leads to the high voltage section and the input power section.** The ground leads must be of sufficient rating to accept the line power fault current. A 4AWG lead or larger (diameter) is appropriate. Secure the ground to the building frame or to a secure station ground in the area. A single point ground is recommended. **DO NOT RELY ON GROUNDS IN THE POWER LINES AS THESE MAY BE TIED THROUGH CONDUIT COUPLINGS AND MAY NOT BE A SOLID GROUND.**

7. **Connect the interconnect cables between the control section and the high voltage section.** The cables are marked appropriately. (X1 to X1, X2 to X2, VM to VM and CM to CM, GND to ground.)

Setting the Overload

1. Ensure that all the steps listed in **Setting up the Equipment** have been accomplished. Take special note to ground the cart to a solid earth ground.
2. Short the high voltage output to the **GROUND** stud on the high voltage section.
3. Connect the input power to a grounded source.
4. Rotate the **OVERLOAD ADJUST** to the maximum setting.
5. Operate the **MAIN POWER** circuit breaker to energize the power circuits.

*** * * C A U T I O N * * ***

P O T E N T I A L L Y L E T H A L V O L T A G E S M A Y B E P R E S E N T

6. Depress the **HV ON** pushbutton. The **HV ON** light glows.
7. Increase the output slowly by rotating the **OUTPUT ADJUST** control until the desired output (overload) current is reached. Rotate the **OVERLOAD ADJUST** control towards the minimum setting until the **OVERLOAD** trips.
8. Re-energize High Voltage and raise the output once more to verify the desired setting. At the completion of setting the overload proceed to the next section for testing instructions.

Operating the Equipment

This section provides step-by-step instruction on various test methods. Many facilities have their own in-house test procedures that should not be superceded by this manual. The purpose of this section is to explain the capabilities of this test set in real-world applications.

AC Insulation Testing

1. Ensure that all the steps listed in **Setting up the Equipment** have been accomplished. Take special note to ground the cart to a solid earth ground.
2. Prior to connecting the output to the test sample be certain the unit is off and the high voltage termination is grounded.
3. Connect the output to the test sample using a customer supplied lead. ***Ensure there is enough clearance to grounded objects for the expected test voltage. The minimum clearance in air is 10 kV ac/inch.*** Return the low side of the load or test sample to GROUND.
4. Connect the input power to a grounded source.
5. Operate the **MAIN POWER** circuit breaker **ON** to energize the main power circuits. If line voltage is present, the **MAIN POWER** pilot light illuminates.

* * * C A U T I O N * * *

P O T E N T I A L L Y L E T H A L V O L T A G E S M A Y B E P R E S E N T

6. Start with the **OUTPUT ADJUST** fully counter-clockwise (zero).
7. Depress the **HV ON** pushbutton. The **HV ON** light illuminates.

* * * C A U T I O N * * *

P O T E N T I A L L Y L E T H A L V O L T A G E S M A Y B E P R E S E N T

8. Adjust the output voltage to the desired level by rotating the **OUTPUT ADJUST** knob.
9. If the **HIGH VOLTAGE OFF** pushbutton is depressed while testing, return the output control to zero.

<p>Note: If a fault occurs while testing, the high voltage will de-energize and must be returned to zero.</p>
--

10. At the conclusion of testing, return the output voltage to zero before depressing **HIGH VOLTAGE OFF**. Turn off the **MAIN POWER** breaker.
11. Thoroughly ground the test sample and the high voltage bushing before disconnecting the output from the load.

THIS PAGE LEFT BLANK FOR APPLICATION NOTES

PERFORMING SPECIAL OPERATIONS

The following section contains information on the care and upkeep of your new HPA SERIES of High Power AC Test Set. There are some notes on troubleshooting and service, which will save much time and money over the life of the unit.

Meter Re-calibration

The HPA SERIES of hipots use precision metal film resistors for measurement and calibration of the voltmeter. The use of these resistors in both the high voltage tank and the metering circuits has minimized circuit drift due to aging and temperature. If recalibration is necessary, potentiometers are provided to compensate any discrepancies.

The certification of meters on a yearly basis is recommended to ensure accurate test results.

Voltmeter Calibration

1. Locate the unit in a position that will allow easy reading of the meters.
2. Remove the panel screws that retain the control panel into the cabinet and pull the panel forward. Place the panel assembly on a stand in front of the cabinet to gain access to the voltmeter board (PCB-001) mounted directly to the voltmeter.
3. Perform the steps in **Setting up the Equipment** at the start of **SECTION 2**. Be sure to ground the power and high voltage sections to a solid earth ground using a ground lead as mentioned in **Setting up the Equipment** prior to connecting the unit to input power.
4. Connect the output toroid to a calibrated reference meter with ability to read to the full output voltage of the unit. Be sure to ground the low side of the reference meter.

5. Raise the output to one half scale on the unit meter. Adjust R4 on PCB-001 as required. This potentiometer is located near the center of the board.
6. Check calibration at half and full scale. Also check both LOW and HIGH ranges for proper tracking. If the customer facility calibration certification requires more points of reference, follow those procedures instead of these.

Current meter Calibration

1. Locate the unit in a position that will allow easy reading of the meters.
2. Remove the panel screws that retain the control panel into the cabinet and pull the panel forward. Place the panel assembly on a stand in front of the cabinet to gain access to the calibration pot behind the current meter.
3. Perform the steps in **Setting up the Equipment** at the start of **SECTION 2**. Be sure to ground the power and high voltage sections to a solid earth ground using a ground lead as mentioned in **Setting up the Equipment** prior to connecting the unit to input power.
4. Connect the output bushing to a calibrated reference meter with ability to read to the full output current of the unit. Be sure to ground the low side of the meter. **Also be cautious to raise the output slowly as the short circuit of the meter on the output will cause the current to jump quickly.**
5. Raise the output current to one half scale on the unit meter. Adjust the calibration pot as required.
6. Check calibration at half and full scale on all ranges. If the customer facility calibration certification requires more points of reference, follow those procedures instead of these.

Oil Insulated High Voltage Tanks

The oil-filled tanks in all the HPA SERIES of hipots are field serviceable. The only requirement is that the tank must be oil filled under vacuum at re-assembly if the transformer is left out of the oil for longer than 3 hours. The parts to service the tank are available from HIGH VOLTAGE, INC. at the address noted on the inside front cover of this manual.

The oil level in the tank should be 1.00 inches from the top header when the oil temperature is 20°C.

RETURNED MATERIAL

If for any reason it becomes necessary to return any equipment or materials to High Voltage, Inc., the Service Department of High Voltage, Inc. must be notified, and authorization received, prior to the shipment of the equipment. When notified, the following information must be provided:

MODEL:
SERIAL NO:
PART NO:
REASON FOR RETURN:
SUSPECTED DEFECT:
CAUSE OF DEFECT:

With the above information provided, High Voltage, Inc. will determine if the return of the equipment is appropriate. If deemed appropriate, a Return Authorization Number will be issued. At that time, the Purchaser will be instructed how to mark and return the equipment.

The above procedure must be adhered to in order to ensure prompt service. No equipment should be returned without the prior knowledge and authorization of High Voltage, Inc.

REPLACEMENT PARTS ORDERING

To order replacement parts, first refer to the Parts List for the product in question. Every part is issued a part number. It is necessary this part number, the product model and serial number are provided. When calling High Voltage, Inc. request the Service Department.

THESE TERMS AND CONDITIONS OF SALE AND LIMITED WARRANTY OF HIGH VOLTAGE, INC. ("High Voltage") SHALL BE GOVERNED BY AND CONSTRUED ACCORDING TO THE INTERNAL LAWS OF THE STATE OF NEW YORK, USA, WITHOUT GIVING EFFECT TO ITS CONFLICT OF LAWS PROVISIONS. THE RIGHTS AND OBLIGATIONS OF ALL PARTIES AND ALL PERSONS OR ENTITIES CLAIMING HEREUNDER SHALL NOT BE GOVERNED BY THE PROVISIONS OF THE 1980 U.N. CONVENTION ON CONTRACTS FOR THE INTERNATIONAL SALE OF GOODS.

1. **ACCEPTANCE.** All orders become effective only when accepted by High Voltage's written order acknowledgment at Copake, New York, USA. Unless modified in writing by an authorized representative of High Voltage, or modified in High Voltage's Quotation or order Acknowledgment, these Terms and Conditions and Limited Warranty shall solely control Purchaser's order. High Voltage expressly rejects any additional or different provisions, terms or conditions proposed by Purchaser at any time.

2. **SCHEDULING.** High Voltage's shipping date specified in High Voltage's quotation or purchase order acknowledgment is approximate and High Voltage shall use reasonable commercial efforts to effect timely shipment. Furthermore, High Voltage shall not be liable for any delay in the performance of orders or contracts or in the delivery or shipment of goods or for any damages suffered by Purchaser by reason of such delay when such delay is, directly or indirectly, caused by, or in any manner arising from Purchaser's fault, fires, floods, accidents, riots, acts of God, war, governmental interference or, embargoes, strikes, labor difficulties, shortage of labor, fuel, power, materials or supplies, transportation delays, or any other cause or causes (whether or not similar in nature to any of these hereinbefore specified) beyond the control of High Voltage.

3. **CANCELLATIONS.** Prior to shipment, Purchaser may request cancellation or delayed delivery of an order or part thereof, but such shall be conditioned upon written consent of High Voltage and upon payment to High Voltage of cancellation or delayed delivery charges to be determined by High Voltage.

4. **SALE AND DELIVERY.** Unless otherwise agreed in writing, sale and delivery of the goods hereunder shall be made EXW or FCA (Incoterms® 2010) at High Voltage's option, High Voltage's dock at Copake, New York, USA, at which time all risk of loss or damage shall pass to Purchaser. All shipments and packaging shall be made in the manner determined by High Voltage, unless otherwise requested by Purchaser, in which case any resultant additional changes and expenses shall be paid by Purchaser.

5. **TAXES.** Any and all sales, use, excise and similar taxes, and duty and all other charges levied or imposed by governmental authority, foreign and domestic, upon any goods sold or contracted to be sold shall be paid by Purchaser and added to the purchase price unless appropriate tax exemption certificates are supplied to High Voltage in form satisfactory to High Voltage.

6. **PAYMENTS.**

a. All payments shall be in US Dollars without discount unless otherwise specified in High Voltage's order acknowledgment. Credit card payments are accepted only if specified in High Voltage's order acknowledgment.

b. Terms of payment are net thirty (30) days from date of invoice, unless otherwise agreed by High Voltage in its order acknowledgment. Delinquent payments are subject to a service charge on the unpaid balance from invoice date equal to the lower of 1-1/2% per month or the maximum rate permitted by law until all amounts are paid in full. If the financial responsibility of Purchaser becomes unsatisfactory to High Voltage for any reason, or if Purchaser has been in default to High Voltage under any order, High Voltage may require full payment in cash before shipment of goods.

c. If Purchaser so requests and makes arrangements prior to shipment

which meet High Voltage's full satisfaction, High Voltage in its discretion may accept irrevocable letters of credit in its favor issued by a United States bank which is satisfactory to High Voltage.

7. **INFRINGEMENT, ETC.** On goods manufactured to Purchaser's specifications, Purchaser shall and does indemnify and hold High Voltage harmless against any claims, damages, liabilities, costs and expenses (including attorneys' fees) arising out of or resulting from actual or alleged infringement of patent, copyright, trademark or other proprietary rights, or claim of unfair trade or unfair competition arising from or occasioned by the use, possession, sale or delivery of any such goods sold by High Voltage.

8. **REPRODUCTION RIGHTS.** Drawings, specifications, reports, photographs and other data relating to all orders and all proprietary rights and interests therein and the subject matter thereof shall be and remain the property of High Voltage. Purchaser agrees that it shall not use High Voltage's drawings, specifications or other materials covered by this order, or any similar article from any other source, or reproduce the same or otherwise appropriate them, without the prior written authorization of High Voltage.

9. **LIMITED WARRANTY.**

a. High Voltage warrants to the original Purchaser of any new goods that the goods are free from defects in material and workmanship under normal use and service for a period of one (1) year from the date of shipment by High Voltage. The obligation of High Voltage under this Limited Warranty is limited, in High Voltage's exclusive option, to repair, replace with new or reconditioned parts or issue credit for goods, parts or materials which prove to be defective. Costs incurred by Purchaser for labor or other expenses to repair or replace such goods, parts and/or materials shall be the sole responsibility of Purchaser. High Voltage shall not be responsible for any damage or lack of performance resulting from: (i) defects due to accident, negligence, alteration, modification, faulty installation, abuse or misuse, whether by Purchaser, Purchaser's agents or employees, or by others than High Voltage (ii) attempted or actual dismantling, disassembly, service or repair by any person, firm or corporation not specifically authorized in writing by High Voltage, or (iii) defects caused by or due to handling by carrier, or incurred during shipment, transshipment or other move.

b. High Voltage expressly disclaims any warranty whatsoever of (i) consumables, and of (ii) parts, components, software (including but not limited to object code and source code and software user instructions), accessories, and materials not prepared, compiled or manufactured by High Voltage, and Purchaser must deal directly with such other supplier. High Voltage may elect to assist Purchaser in settling such claim against such other supplier, but any such assistance shall not prejudice High Voltage's position as to its own liability.

c. Compliance with the following Limited Warranty Claim Procedure is a condition precedent to the obligation of High Voltage under this Limited Warranty:

i. Purchaser must notify High Voltage in writing as soon as is reasonably possible, but within the applicable warranty period, of any alleged defect in material, workmanship, or operation of any goods covered under this Limited Warranty. Such notice must describe in detail the defect, any and all defective parts, and the alleged cause of the defect. No goods may be returned to High Voltage without High Voltage's prior written permission, which permission may be withheld by High Voltage in its sole discretion.

ii. At the exclusive option of High Voltage, Purchaser may be directed in writing to dismantle the goods at the Purchaser's cost and expense and ship the goods prepaid to High Voltage (refer to "Returns" Section 10 for provisions regarding the return of any goods to High Voltage). If High Voltage elects to inspect the goods at Purchaser's site, and to repair, replace,

[Section 9.c.ii. continued on page 2]

or ship the defective goods to High Voltage's factory, Purchaser, at its own cost and expense, shall provide the facilities for such work as needed to inspect and evaluate and possibly repair/replace the goods. If inspection discloses that the defect is not one for which High Voltage is liable, then Purchaser shall promptly reimburse High Voltage for all expenses incurred.

iii. Upon receipt of the defective goods, or following access to the same, High Voltage shall inspect and evaluate the goods and determine the validity of Purchaser's claim.

iv. The validity of any warranty claim, Purchaser's compliance with the Limited Warranty and Limited Warranty Claim Procedure, and the obligation to replace, repair, or issue credit for any goods are solely and exclusively to be determined by High Voltage and any determination shall be final and binding.

d. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, STATUTORY OR EXPRESSED OR IMPLIED ON THE PART OF HIGH VOLTAGE, INCLUDING THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT; FURTHERMORE, HIGH VOLTAGE MAKES NO WARRANTY REGARDING NON-INTERRUPTION OF USE OR SOFTWARE FREEDOM FROM BUGS. HIGH VOLTAGE NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON, FIRM, OR CORPORATION TO ASSUME ANY LIABILITY OR OBLIGATION IN CONNECTION WITH THIS SALE OR LIMITED WARRANTY ON HIGH VOLTAGE'S BEHALF AND PURCHASER ACKNOWLEDGES THAT NO REPRESENTATION EXCEPT THOSE MADE HEREIN HAS BEEN MADE TO PURCHASER.

10. **RETURNS.** No goods may be returned to High Voltage without High Voltage's prior written permission, which permission may be withheld by High Voltage in its sole discretion. Any request for return authorization must be in writing and include, as applicable, model number, serial number, part number, reason for return, alleged defect, and apparent cause of alleged defect. Except as specifically provided in Section 9 Limited Warranty, if High Voltage consents to return of goods: (a) all return shipments are to be via prepaid freight and with all other charges prepaid, (b) if goods are returned to High Voltage within sixty (60) days from the date of original shipment for reasons other than an error by High Voltage in filling the Purchaser's order, Purchaser shall only be entitled to receive a credit in an amount equal to the payment received by High Voltage for the goods minus (i) handling charges, and (ii) a restocking fee determined solely by High Voltage which shall not exceed twenty five percent (25%) of the invoiced amount, and (c) if goods are returned to High Voltage after sixty (60) days from the date of original shipment for reasons other than an error by High Voltage in filling the Purchaser's order, Purchaser shall only be entitled to receive a credit in the amount equal to the payment received by High Voltage for the goods minus (x) a handling fee, and (y) a restocking fee in excess of twenty five percent (25%) which shall be determined by High Voltage.

11. **SECURITY INTEREST.** In order to induce High Voltage to ship goods without full payment, Purchaser grants a security interest to High Voltage in any and all of Purchaser's right, title and interest in the goods, and Purchaser agrees to comply with any reasonable request of High Voltage to perfect such security interest. Purchaser hereby further authorizes High Voltage to perfect High Voltage's security interest in said goods and consents to filing one or more financing statements without the signature of Purchaser.

12. **ARBITRATION.** Any controversy arising out of or relating to this document, or any breach thereof, including, without limitation, any claim that this document is voidable or void, shall be submitted to final and binding arbitration before, and in accordance with, the Commercial Rules of the American Arbitration Association then in effect, and judgment upon the award may be entered in any court have jurisdiction thereof; provided, however, that this clause shall not be construed to limit any rights which

High Voltage may have to apply to any court of competent jurisdiction for equitable, injunctive or provisional relief. This arbitration provision shall be deemed self-executing, and in the event that either party fails to appear at any properly noticed arbitration proceeding, an award may be entered against such party notwithstanding said failure to appear. Such arbitration shall be conducted before a single arbitrator under the aegis of the American Arbitration Association in Columbia County, State of New York. The arbitrator shall have the authority to award expenses to the successful party.

13. **LIMITATION OF LIABILITY.** TO THE MAXIMUM EXTENT PERMITTED UNDER APPLICABLE LAW, AND NOTWITHSTANDING ANYTHING ELSE IN THIS DOCUMENT OR OTHERWISE, INCLUDING THAT HIGH VOLTAGE WAS WARNED THAT DAMAGES WOULD OCCUR OR WERE LIKELY TO OCCUR, HIGH VOLTAGE SHALL NOT BE LIABLE WITH RESPECT TO ANY SUBJECT MATTER OF THIS DOCUMENT UNDER ANY CONTRACT, NEGLIGENCE, STRICT LIABILITY OR OTHER LEGAL OR EQUITABLE THEORY FOR (i) ANY AMOUNTS IN EXCESS IN THE AMOUNT PAID TO HIGH VOLTAGE FOR THE PARTICULAR GOODS OR PART THEREOF WHICH GAVE RISE TO THE APPLICABLE CAUSE OF ACTION OR CLAIM, OR (ii) ANY INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, LOST PROFITS OR LOST OR CORRUPTED DATA, OR (iii) COST OF PROCUREMENT OF SUBSTITUTE GOODS, SOFTWARE, TECHNOLOGY OR SERVICES. HIGH VOLTAGE SHALL HAVE NO LIABILITY FOR ANY FAILURE OR DELAY DUE TO MATTERS BEYOND ITS REASONABLE CONTROL.

14. **SEVERABILITY.** These Terms and Conditions and Limited Warranty are the entire understanding between Purchaser and High Voltage with respect to the subject matter hereof and supersede all prior agreements, dealings and negotiations. No modification, alteration or amendment shall be effective unless made in writing and signed by a duly authorized representative of High Voltage. No waiver of any breach hereof shall be held to be a waiver of any other or subsequent breach. Nothing contained in this document shall be construed as requiring the commission of any act contrary to law. Whenever there is any conflict between any provision of this document and any present or future statute, ordinance or regulation contrary to which the parties have no legal right to contract, the latter shall prevail, but in such event the provision of this document thus affected shall be curtailed and limited only to the extent necessary to bring it within the requirements of the law. In the event that any part, article, section, paragraph, sentence or clause of this document shall be held to be indefinite, invalid or otherwise unenforceable, the entire document shall not fail on account thereof, and the balance of the document shall continue in full force and effect. If any arbitration tribunal or court of competent jurisdiction deems any provision hereof (other than for the payment of money) unreasonable, said arbitration tribunal or court may declare a reasonable modification thereof, and this document shall be valid and enforceable, and the parties hereto agree to be bound by and perform the same as thus modified.

15. **BASIS OF BARGAIN.** Each party recognizes and agrees that the warranty disclaimers and liability and remedy limitations in this document are material, bargained for bases of their agreement and that they have been taken into account and reflected in determining the respective obligations of the parties.

[End]


Advanced test equipment for high voltage proof and preventive maintenance testing of electrical apparatus +1.518.329.3275 | sales@hvinc.com | web: www.hvinc.com

DC Hipot/Megohmmeter Test Sets


Two Testers in One



AC Hipots - Field Portable

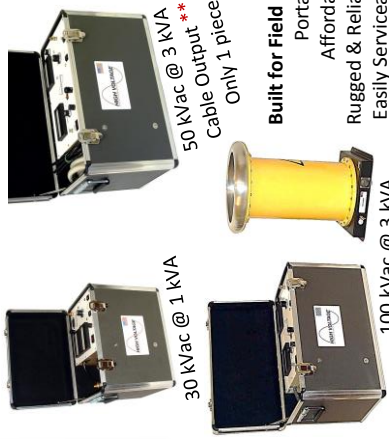


Aerial Lift Test Sets - AC

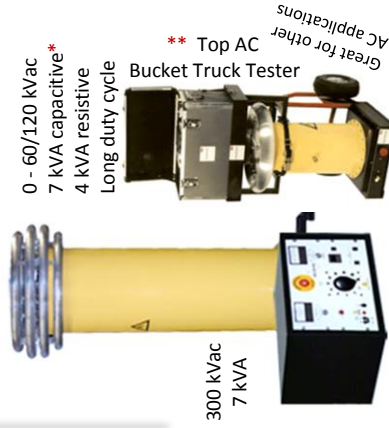

Oil Dielectric Testing

Standard & Micro Controlled
 60 kVac & 100 kVac models

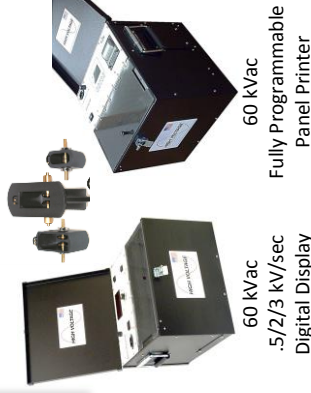

Very Low Frequency AC Technology

Cables & Motors/Generators
 0.1 - 0.01 Hz up to 200 kVac

VLF Withstand
 VLF TD & VLF PD



50/60 Hz AC Dielectric Test Equipment: 5 kVA - 50 kVA

AC Testing of High Capacitance Loads - up to 300 kVac



Concentric Neutral Resistance Tester

Ω-CHECK™



HV Dividers

150 kV AC/DC
 300 kV AC/DC




VLF Diagnostic Cable Testing

Tan Delta & Partial Discharge




Capacitor Discharge Systems - Thumpers

Three Full Joule Outputs - VLF/Thumper Combo

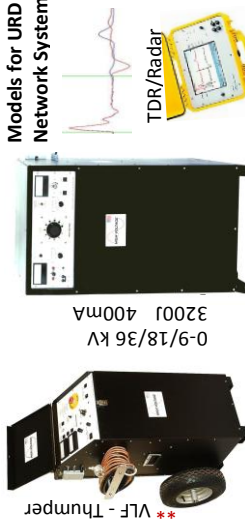

* Van Package *

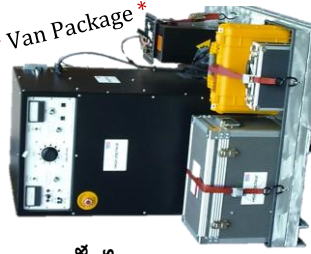

** New Solid State Design
 34 kV peak - sine wave
 0.1 - 0.01 Hz to 7 uF

